

# SEFIS R08 MOTOALARM

## Read the whole manual before use!

Thank you for buying our vehicle alarm with wireless remote. Alarm R08 is mainly intended to be used to secure motorcycles, scooters, quads, side-by-sides, lawn vehicles and so on.

Alarm uses integrated motion sensor and is activated by movement or vibration of the vehicle.

## Package contents:

2 wireless remotes including batteries  
control unit with wiring and the horn  
double-sided mounting tape


## Warning:

**Prevent damage of the remote. Do not throw or shake the remote. Keep it away from dust, moisture and liquids.**

If remote doesn't seem to be working or only works at short distance change its batteries..

## Installation:

- Access the battery of the vehicle.
- Place the wiring hooks under the battery screws
  - red cable on positive post +
  - black cable on negative post -
- Attach the control unit to free spot near the battery with the double-sided tape or prevent its movement through other means.

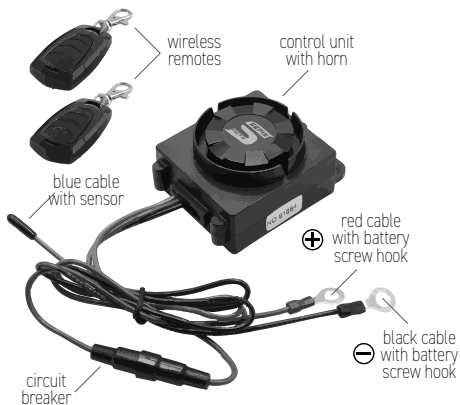

## Alarm function:

Press the remote to activate the alarm, after the activation sound the alarm is armed. If the motion sensor detects movement warning will be sounded first and if the movement continues the alarm will start.

If the movement stops the alarm sound will stop soon as well and the control unit switches back into the armed mode.

## The remote buttons:

1. Arm alarm
2. Disarm alarm
3. Activate alarm



## Technical parameters:

Working voltage DC 12V (9V - 14V)

Static current <6 mA

Working temperature -20 ~ +80

Alarm volume: up to 125 dB

Batteries compatible with the remote:  
2 \* CR2025 / 2 \* CR2016 / 27A

Wireless remote voltage:  
DC 6V / 9V / 12V

Remote control frequency range:  
315 MHz / 433 MHz

Wireless remote working distance  
in open space: up to 40M

Výrobce/Manufacturer/Hersteller:  
**SEFIS moto s.r.o.** Spojovací 182/11  
Prague 9 190 00 [info@sefismoto.cz](mailto:info@sefismoto.cz)  
made in PRC