


FRONT HEAD LIFT EXTENSION

COMPATIBLE WITH SEFIS REAR PADDOCK STANDS

MANUAL EN

1. Extension installation


Front head lift paddock stand extension is compatible with rear Sefis paddock stands.
To install **the extension body** onto the paddock stand as pictured below. Adjust the height and reach of the extension and secure the extension with **split pins** and the paddock stand **securing screw**. Available as an additional purchase is the **maintenance pin**, which screws into the M6 threading on the body of the extension.

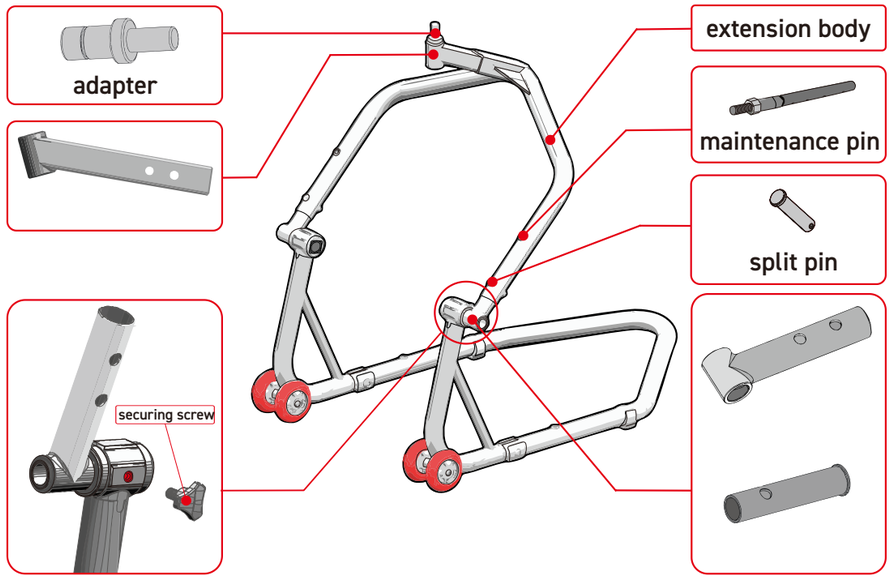

2. Use

Choose a fitting **adapter** depending on the diameter of the **front head hole** of the specific motorcycle and insert the **adapter** into the extension body, no further lock-in is needed. It is advised to cover the front fender with a piece of cloth to avoid possible damage in case of careless manipulation. Then move the paddock stand around the front wheel and insert the **adapter** into the **front head hole** of the motorcycle. Once affixed slowly press down the main handle of the paddock stand which will smoothly raise the wheel.



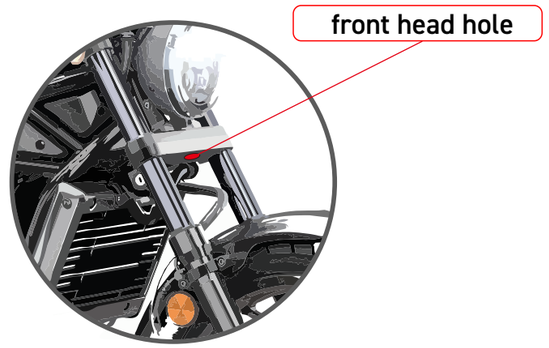

3. Warning

When using two paddck stands always lift rear wheel first and then proceed to lift the front wheel.
It is advised to not lift motorcycle alone as the safest use is for one person to hold the motorcycle while another person lifts it using the paddock stand. Prior to the use always inspect technical condition of the paddock stand and the adapter set up. Keep away from children when in use.
Maximum carrying capacity of single paddock stand is **200 kg** for maximum motorcycle weight of **400 kg**.