


## Handlebar installation

1. Pick the sleeve of right diameter for your handlebars and together with plastic insert attach to the handlebars.
2. From the other side of the handlebar attach the T-ball adapter onto the sleeve.
3. Insert the washers onto the sleeve threads and then the nuts. Tighten the nuts until the mount is firmly attached to the handlebar. Finally put on the rubber tip covers.
4. Place leg of the holder with the hand screw onto the the ball of the ball of the already installed mount on one side and the ball of the holder on the other and partially tighten the hand screw. Then set the optimal angle of the holder and finish tightening of the hand screw.

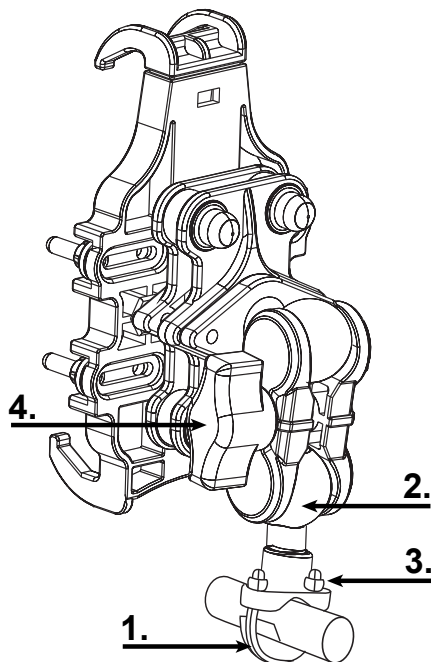

## Rearview mirror installation

1. Loosen and remove the rearview mirror, insert the adapter under the mirror and then tighten the mirror once again.
2. Place leg of the holder with the hand screw onto the the ball of the ball of the already installed mount on one side and the ball of the holder on the other and partially tighten the hand screw. Then set the optimal angle of the holder and finish tightening of the hand screw.

